

# TRESTON MEDI MOBILE WORKSTATIONS

## 1. Mobile workstation MLC 405

This mobile workstation is suitable for use with a laptop computer. A laptop computer can be used either on the work surface or housed in the enclosure underneath it, in which case the screen can be seen through the opening in the rear edge. A separate keyboard can be kept either on the work surface or on a keyboard and mouse tray (optional accessory). There are holes in the laptop enclosure for leading through cables.

The mobile workstation is equipped with a gas spring, which enables stepless height adjustment. Thanks to its extensive adjustment range, the mobile workstation is suitable for both standing and sitting work.

- Work surface dimensions 520 x 370 mm, external dimensions 590 x 540 mm (W x D)
- Stepless height adjustment from 800 to 1,200 mm
- Castors Ø 125 mm, 2 with brakes
- The work surface is surrounded by a Euro rail that also functions as a handle

## 2. Light mobile workstation MLC 405L

As the name suggests, the light mobile workstation is a more lightweight version of the mobile workstation. The workstation is equipped with a work surface. Height is adjusted with an adjustment screw, secured by a locking lever.

- Work surface dimensions 490 x 450 mm, external dimensions 575 x 540 mm (W x D)
- Stepless height adjustment from 750 to 1,150 mm
- Castors Ø 125 mm, 2 with brakes
- The work surface is surrounded by a Euro rail that also functions as a handle

## 3. Mobile Workstation MLC405POW

This mobile workstation can be used either with a laptop computer or Medical PC. The work surface and laptop enclosure are similar to those of the mobile workstation MLC405.

The mobile workstation is equipped with a gas spring, which enables stepless height adjustment. Thanks to its extensive adjustment range, the mobile workstation is suitable for both standing and sitting work.

- Work surface dimensions 520 x 370 mm, external dimensions 590 x 675 mm (W x D)
- Stepless height adjustment from 800 to 1,200 mm
- Castors Ø 125 mm, 2 with brakes
- Lockable
- The work surface is surrounded by a Euro rail that also functions as a handle
- A separate enclosure for the battery
- Plastic spiral wrapping and 2 pcs CC10 cable clips for routing the cables




Mobile workstations equipped with laptop enclosures are lockable.



Large, high-quality castors provide excellent mobility.



# ACCESSORIES FOR MOBILE WORKSTATIONS

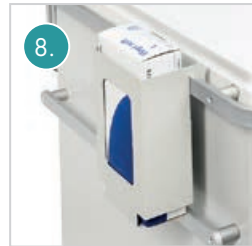

## 1. Keyboard and mouse tray KH620N

Code	Dimensions, mm
<b>KH620N</b>	600 x 210

Sturdy and ergonomic keyboard and mouse tray with a rounded wrist support to be mounted under the work surface. The handedness of the mouse tray is easy to change. An antibacterial mouse pad is also included in the delivery. The tray's travel distance can be adjusted steplessly by 120 mm. The tray's maximum travel distance is 135–165 mm.

## 2. LCD swivel arm MS

Code	Usage height, mm	Load capacity, kg
<b>MS</b>	320	8

Swivel arm to which the MH and MY brackets are attached. For max. 22" screens.

## 3. LCD swivel arm MSH

Code	Usage height, mm	Load capacity, kg
<b>MSH</b>	550	15

More robust swivel arm for the MH and MY brackets. For max. 24" screens. The swivel arm delivery also includes 3 pcs CC8 cable clips.

## 4. LCD bracket MH

Code	Load capacity, kg
<b>MH</b>	15

LCD bracket for Medical PC and separate displays. VESA mount 75 x 75 and 100 x 100 mm. The displays are quick and easy to remove from the bracket with the quick release function. The bracket is attached to an MS or MSH swivel arm.

## 5. Tablet bracket MY

Code	Load capacity, kg
<b>MY</b>	0.5

Bracket for 7–10" tablet computers. Also requires an MH bracket.

## 6. Accessories basket AB1930

Code	Basket dimensions, mm
<b>AB1930</b>	155 x 230 x 140

Accessories basket for convenient transportation of various small items. Includes a mount and one blue stacking bin 1930, whose internal dimensions are 155 x 230 x 140 mm (w x d x h). Mounted on the trolley frame.

## 7. Holder for a disinfectant bottle DH

Code
<b>DH</b>

Mounted on the Euro rail. Suitable for a Ø 25 mm hand disinfectant bottle. Suitable for 10 x 25 mm rails of any manufacturer

## 8. Disposable glove package mount EGB

Code	Dimensions, mm
<b>EGB</b>	135 x 76 x 221

Mount for disposable glove packages. Mounted on the Euro rail. Suitable for 10 x 25 mm rails of any manufacturer

## 9. Binder mounts FH

Code	Details
<b>FH1</b>	The mount fits a single 75 mm wide binder
<b>FH3</b>	The mount fits three binders 75 mm in width

A binder mount enables easy transportation of necessary documents. Mounted on the trolley frame.



With the LCD swivel arms MS and MSH, a Medical PC can easily be installed on the mobile workstation.